




Nelson & Nelson Mfg.
5210 Stadium Blvd, Suite C
Jonesboro AR 72404
870-268-6393 : Cell 219-1019

Installation Instructions 10-11-21

Model SRT-BRKR20+
2020+ RT BRAKE PEDAL RISER KIT

Steps needed to install your Brake Riser Kit.

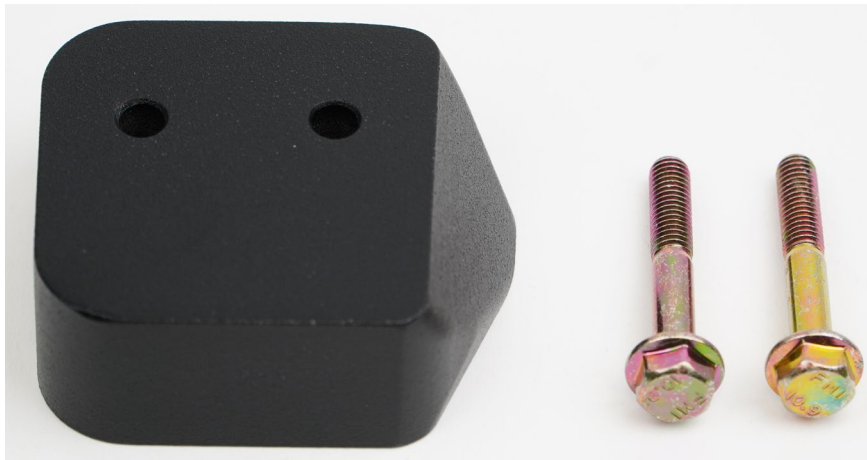

1.- First remove your existing brake pad from your brake pedal by removing the two bolts from underneath the brake pad. Install the new spacer block and notice its shape fits the brake pad. Notice the spacer has an angled portion that supports the angled rubber pad in middle photo. That's aligns with the OEM brake pod for support. Install the existing brake pad and use the new supplied bolts to secure the pad to the brake arm. Use Loctite Medium **Blue** on the threads. Your Riser is installed!



We thank you for purchasing our 2020+ Spyder RT Ryker Accessory Kit. Today we know the needs for accessories that provide a higher level of comfort & style while riding and we have solved that demand with a stylish system that compliments the design of your Spyder®!

spyderextras.com