



Nelson & Nelson Mfg.
5210 Stadium Blvd, Suite C
Jonesboro AR 72401
870-268-6393 : Cell 870-219-1019

Installation Instructions 5-19-25

Model CAN-LEDB

Canyon Front Grille LED LIGHT Bar

Steps needed to install your Canyon Grille LED Light Bar Kit.



1.- To Install your new Canyon front Grille Led Light Bar you must first remove the driver seat. Simple turn the ignition key to the unlock position and remove the driver seat. Next locate the cover panel as shown below and remove the two push pins and the bolt with an 8mm socket driver.




2.- Once the rear panel below the seat is removed remove the upper panel surrounding the ignition switch and switches. First twist of the plastic nut Around the ignition key as shown below. Lift up the plastic housing and locate the upper right plastic switch cover and remove it.



3.- Locate the switch wire harness that was below the plastic switch cover you just removed. Next take the 4 wires from the supplied switch and plug them into the OEM harness as shown below.


Black Ground wire goes in upper left socket, Red wire in upper right socket, Black ground wire in middle socket and Yellow wire in lower right socket. Slide down the back wire cover and snap in place as shown below. Both black wires are the same ground wire.

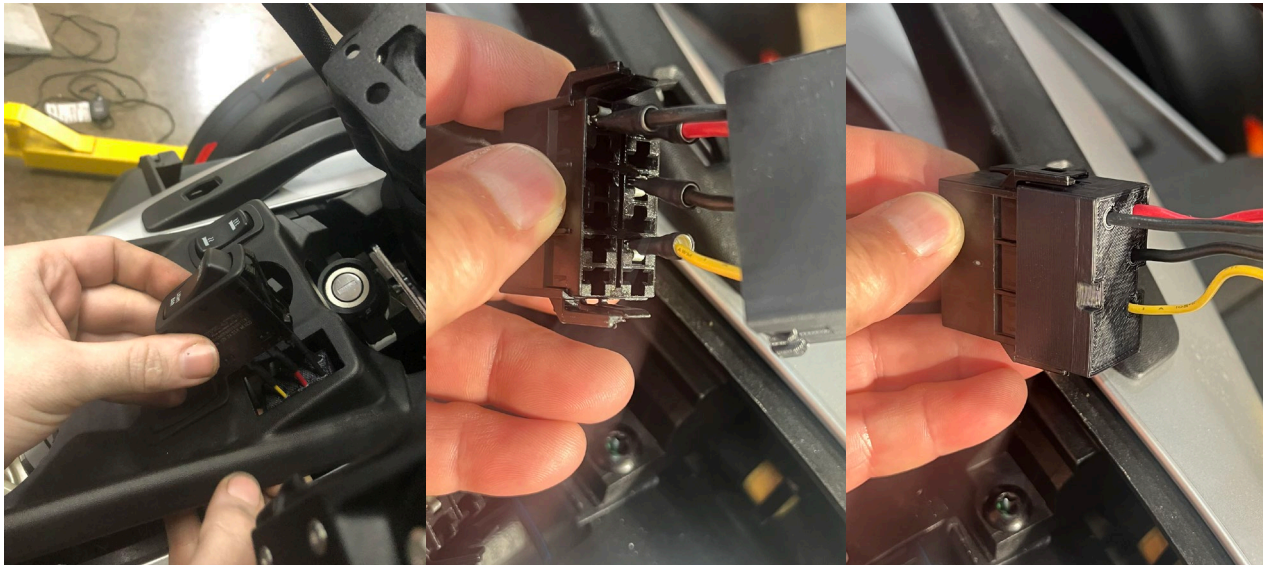

4.- Reinstall the cover in reverse of how it was removed and place the plastic nut around the ignition key area. You can test it as shown as the Amber light will glow.



5.-Next install the front light bar. The light bar comes assembled but will need to be adjusted once installed. Locate in the upper right corner of the plastic front grille a plastic tab. Remove this and you will see the factory accessory light plug.

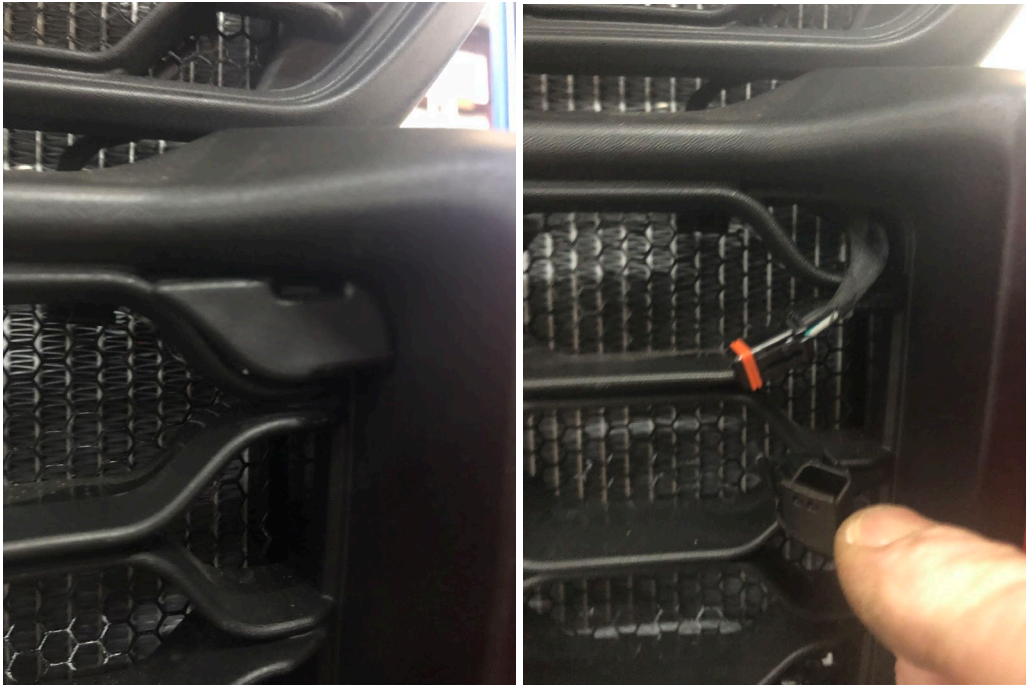

5.- Using a T-30 Torx wrench, remove the top two bolts as shown below each side and only loosen the lower two. Once the front rails are loose, install the supplied plastic spacers as shown. They are designed to fit the rail. Do this for each side.



6.-Take the light bar, plug the cable into the OEM accessory wire plug and install the bar between the two rails between the spacer and the frame of the Canyon. Once installed tighten down all 4 mount bolts. Then adjust the light bar direction pointing straight out and down slightly. This adjustment is done with the lower screws on the light bar which allows the light bar to swivel upwards or downwards. Once installed test the light with the switch you just installed.



Make sure the top switch over is reinstalled as it was removed and install the driver seat. Your new Canyon Light Bar is now installed.

We thank you for purchasing our Canyon Grille Led Light Bar System. Today we know the needs for Quality Accessories, and we have solved that demand with a stylish system that compliments the design of your NEW CANYON®!

spyderextras.com