



Nelson & Nelson Mfg.
5210 Stadium Blvd, Suite C
Jonesboro AR 72404
870-268-6393 : Cell 219-1019

Installation Instructions 5-28-25


Model CAN-RCK

CANYON Rear Trunk Carrying Rack

Steps needed to install your CANYON Trunk Carrying Rack



- 1.- First place the rack over the rear trunk and align the rack centered on the BRP logo as shown below. Make sure the rack is aligned on all sides with the trunk. Its design allows it to follow the lines of the trunk shape. With a marker mark the 4 holes as shown.

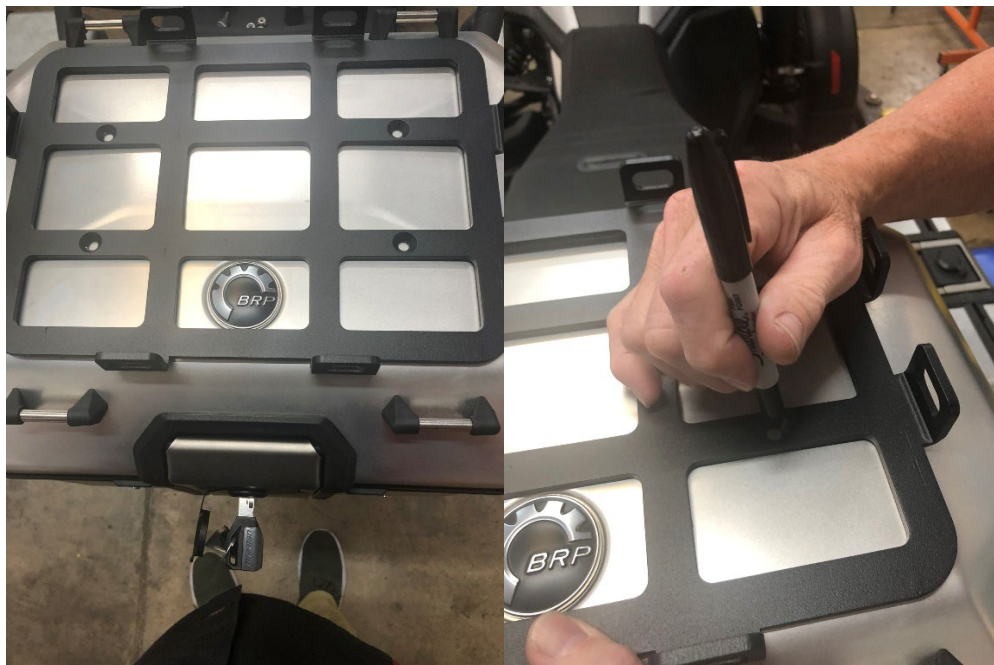

2.-With all 4 holes marked, take a 1/4" drill and drill each hole.



3.- Take the rack and flip it over. Take the 4 supplied bolts and rubber spacers and place a bolt through the hole and rubber spacer as shown below. Do this for all 4 spacers. Next take the rack and place it on the trunk. Raise the trunk and place a washer and locknut on each bolt. Take a 4mm Allen wrench and a 7/16" socket and tighten down each bolt evenly to where you start to see the rubber spacer compress. That insures a watertight seal. Your new rear trunk rack is installed.



We thank you for purchasing one of our CANYON Accessories, Rear Trunk Carrying Rack Kit. Today we know the need for accessories that provide a higher level of Style and Design, and we have solved that demand with a stylish system that compliments the design of your CANYON®!

spyderextras.com