




Nelson & Nelson Mfg.
5210 Stadium Blvd, Suite C
Jonesboro AR 72401
870-268-6393 : Cell 870-219-1019

Installation Instructions 6-3-25

Model CAN-DLED

Canyon Front Grille LED LIGHT Bar

Steps needed to install your Canyon Driving LED Light Bar Kit.

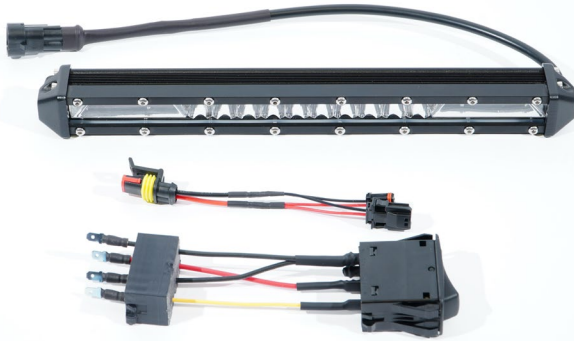


1.- If you are installing this Light Bar alone and not as an add-on to the CAN-LEDB Please Proceed.
To Install your new Canyon front Driving Led Light Bar you must first remove the driver seat. Simple turn the ignition key to the unlock position and remove the driver seat. Next locate the cover panel as shown below and remove the two push pins and the bolt with an 8mm socket driver.



2.- Once the rear panel below the seat is removed remove the upper panel surrounding the ignition switch and switches. First twist of the plastic nut Around the ignition key as shown below. Lift up the plastic housing and locate the upper right plastic switch cover and remove it.



3.- Locate the switch wire harness that was below the plastic switch cover you just removed. Next take the 4 wires from the supplied switch and plug them into the OEM harness as shown below. Black Ground wire goes in upper left socket, Red wire in upper right socket, Black ground wire in middle socket and Yellow wire in lower right socket. Slide down the back wire cover and snap in place as shown below. Both black wires are the same ground wire.

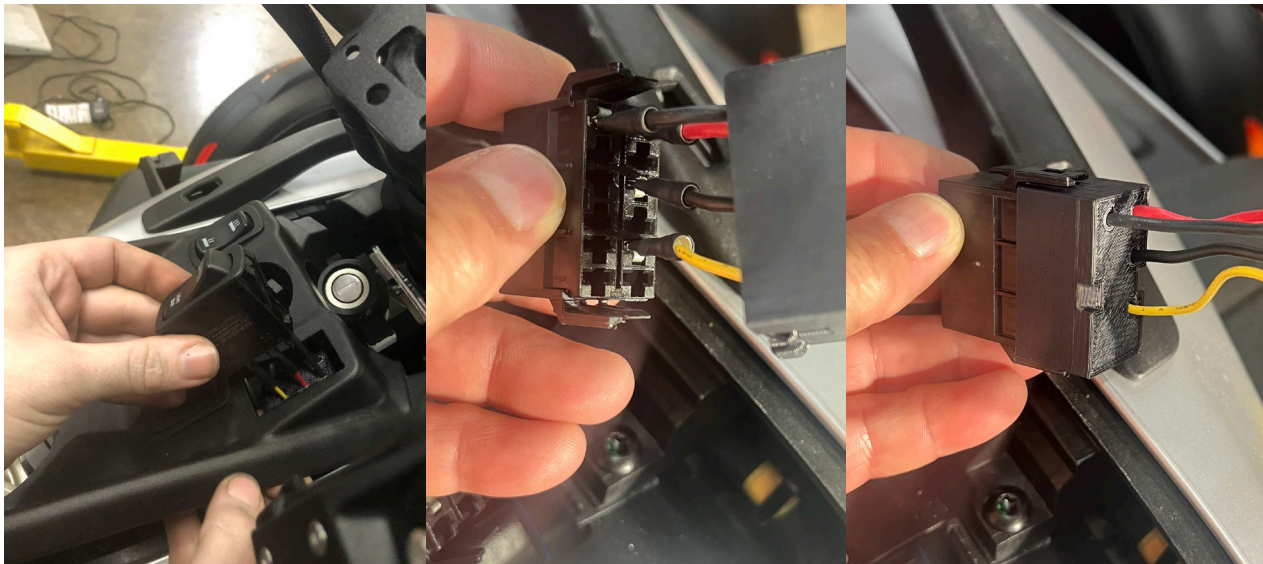


4.- Reinstall the cover in reverse of how it was removed and place the plastic nut around the ignition key area. You can test it as shown as the Amber light will glow.



5.-Next install the front light bar. The light bar wire is found behind the left front wheel well. This plug is in a socket right behind the wheel opening. Reach in and unplug the connector as shown. Take the wire adapter supplied and plug that adapter into this plug. Take the male small end plug and plug that back in the socket behind the fender where the original plug was unplugged.



6.- First remove the Hood cover. Next take the Light Bar, with the supplied alcohol pad clean the area where the light bar will be mounted as shown in this location below the light bar. Next remove the backing from the tape. You will want to drop the light bar straight down with the power cord on the right side. Before you place the light look in on the right side to see an opening towards the outside where the plug is located and fish the wire to that location. When placing the light in place be sure to center it up in the space from left to right and the light bar will have about 1/4" space behind the bar to the back of the plastic house you are mounting in on. You can look straight down to see that 1/4" space as you place the light. Press the light down firmly along the entire light so it will adhere as it should. In the lower right picture, you can see the space behind the bar needed.

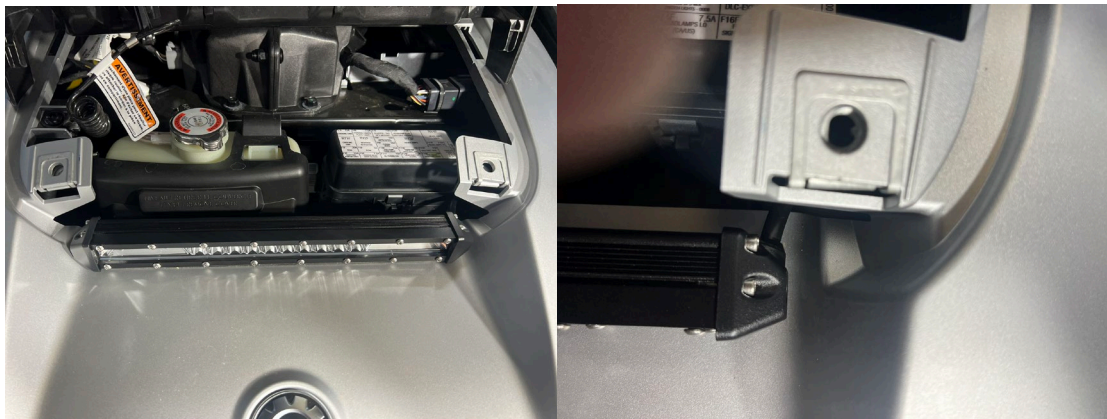

7.-Once the Light Bar is in place, return to where the plug is located and plug the light bar into the remaining socket. Then turn on the key and test the switch as the light should come on. If so, you have completed the installation. Take the wiring plug below and tuck it back up behind the fender where the OEM original socket is located. Make sure the top switch cover is reinstalled as it was removed and install the driver seat. Your new Canyon Light Bar is now installed.



We thank you for purchasing our Canyon Led Light Bar Systems. Today we know the need for Quality Accessories, and we have solved that demand with a stylish system that compliments the design of your NEW CANYON®!

spyderextras.com