




Nelson & Nelson Mfg.
5210 Stadium Blvd, Suite C
Jonesboro AR 72401
870-268-6393 : Cell 870-219-1019

Installation Instructions 6-19-25

Model CAN-DRLV

Canyon Front Driving Led Light Pod Kit

Steps needed to install your Canyon Driving LED Light Pod Kit.

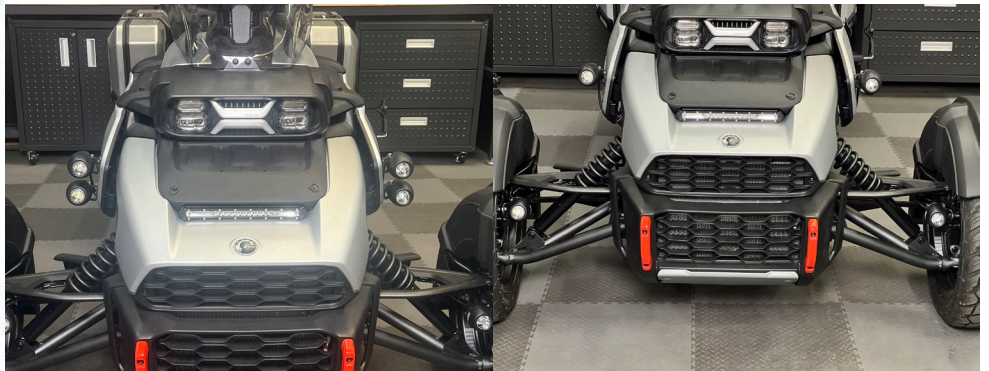

1.- To Install your new Canyon front *Driving Led Light Pod Kit*, you will have two options of mounting the 4 pods. Option 1 is, mount two pods on each side on the upper side panels as shown above. Option 2 is mounting one set on the upper side panels and one set down on the front wheels. Choose which option you think works best for your application.

2.- Remove the driver seat and then remove the center console panel. You do so by removing the front lower panel as shown below and then remove the two push pins and bolt using an 8mm socket.



3.-First twist the plastic nut around the ignition key as shown below. Lift-up the plastic housing and locate the lower right blank switch cap and remove it.




4.- Next take the supplied switch and place it into the switch housing as shown below then seat the switch.




5.- Then take the plastic cover off the area at the battery.

Take the supplied wiring harness and secure the red wire to the positive terminal on the battery and the black on the negative. Secure the relay down in the area below the battery.

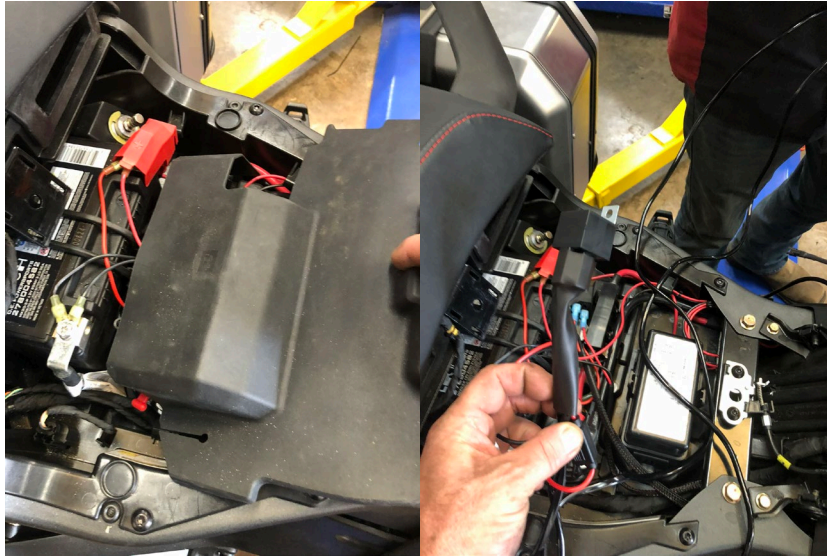

5.- Take the white plug from the switch and plug it into the white plug form the relay harness. Take the two leads out to the Light Pods and run them up the center area then secure under the oem tab holding wires secure.

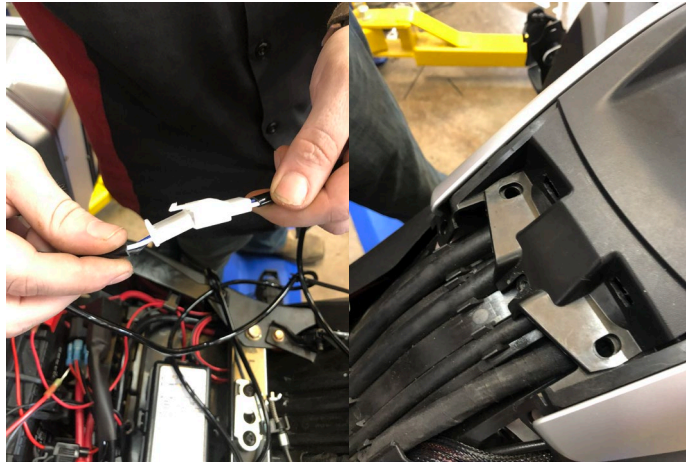


6.- On each side remove the upper access panels as shown below. This photo is the left side.



7.-The run the remaining wire from the switch with the Y-Adapter attached and plug it into the OEM accessory wire as shown below. This wire is tucked up in the upper left corner in the side location. This powers the switch that turns the relay on or off.




8.- Decide on whether you want two upper pod lights or one set up and the other down on each front wheel. These two screw locations are where either one or both pod light sets will mount. If both sets are on the upper side panels you will mount one on each of these screws. Using a T-25 Torx wrench secure the Pod mounts using the OEM screw and the supplied rubber washer. Mount either one or two pods. If one is used on the upper side panels place them on the top screw location.

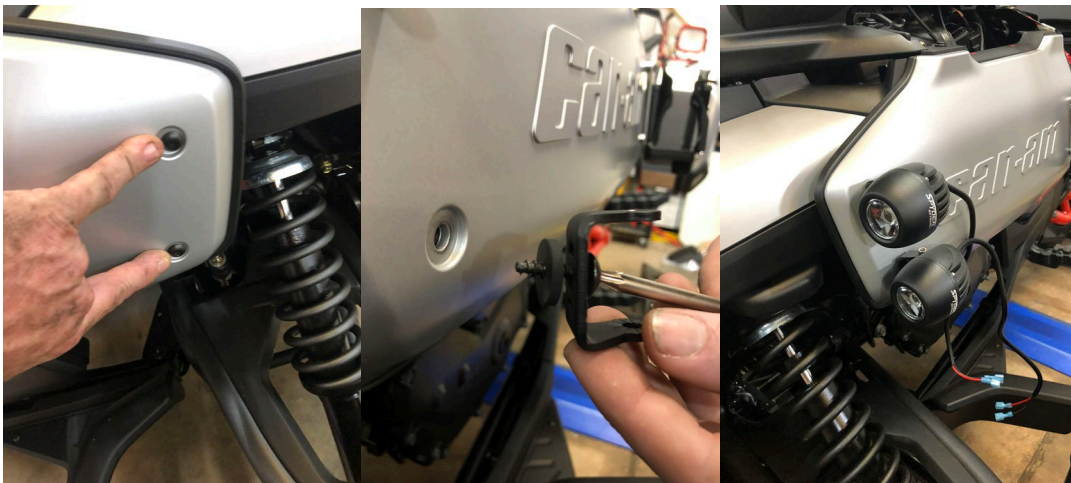

9.- Take the shorter Light Pod wire and run it to the left side as shown. Take the supplied Y-adapter cables and plug into the wire pod main wire. If both pods are on the upper panel, you will take the pod light cable and run under the panel and plug into the Y-adapter. For clarity we show the pods plugged into the y-adapter on the outside of the panel. You will do this behind the panel. If an extension cable is needed to this main pod cable one is included in this kit. If you only have one pod light mount upper, then you will take the longer extension cable and plug it into the wire Y-adapter cable and run the extension cable down along the a-arms underside so they plug into the light pod you will install on the wheel unit. These wires will plug into each other and be secured under the a-arm using the factory wire clamps. Secure all with the supplied wire ties.



10.- To install the Pod Light on the wheel housing you will see a tab with an existing hole. Take the light pod and supplied bolt and secure it to this tab using the supplied 8mm locknut. Use a 13mm wrench to tighten down. Only tighten down once all light pods are installed and direct the light beams as you desire, then secure all by tightening down. Do the same for the right side. Before reinstalling all the panels and center console, test the system to make sure all lights are working. If so, you're complete and reinstall all panels in reverse of how you removed them.

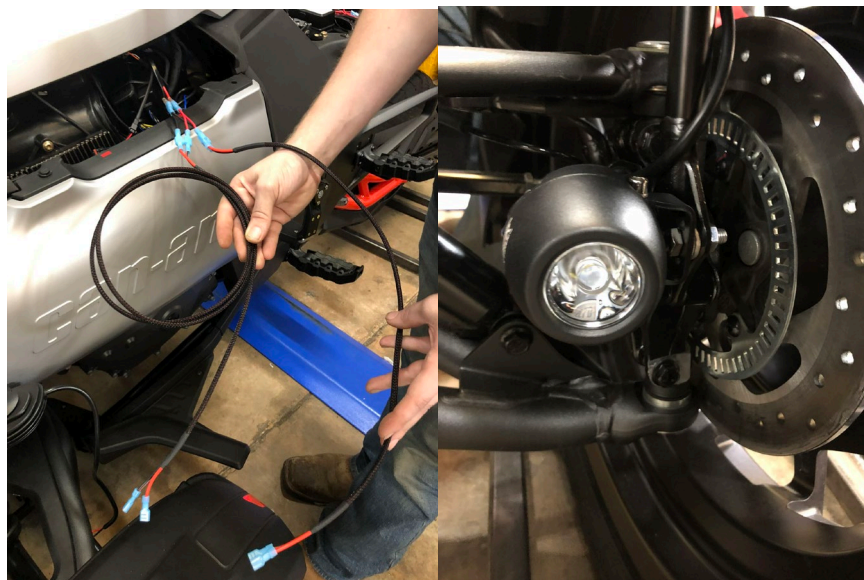

We thank you for purchasing our Canyon Led Light Pos Kits. Today we know the need for Quality Accessories, and we have solved that demand with a stylish system that compliments the design of your NEW CANYON®!

spyderextras.com