



**Nelson & Nelson Mfg.**  
5210 Stadium Blvd, Suite C  
Jonesboro AR 72401  
870-268-6393 : Cell 870-219-1019

Installation Instructions 10-21-25

### **Model CAN-GLEDB**

### **Canyon Front Grille Guard LED LIGHT Bar**

### **Steps needed to install your Canyon Grille Guard LED Light Bar Kit.**




**1.- To Install your new Canyon front Grille Led Light Bar you must first remove the driver seat. Simple turn the ignition key to the unlock position and remove the driver seat. Next locate the cover panel as shown below and remove the two push pins and the bolt with an 8mm socket driver.**



**2.- Once the rear panel below the seat is removed remove the upper panel surrounding the ignition switch and switches. First twist of the plastic nut Around the ignition key as shown below. Lift up the plastic housing and locate the upper right plastic switch cover and remove it.**




**3.- Locate the switch wire harness that was below the plastic switch cover you just removed. Next take the 3 wires from the supplied switch and plug them into the OEM harness as shown below. Black Ground wire goes in upper left socket, Red wire in upper right socket and Yellow wire in lower right socket. Slide down the back wire cover and snap in place as shown below. Both black wires are the same ground wire.**

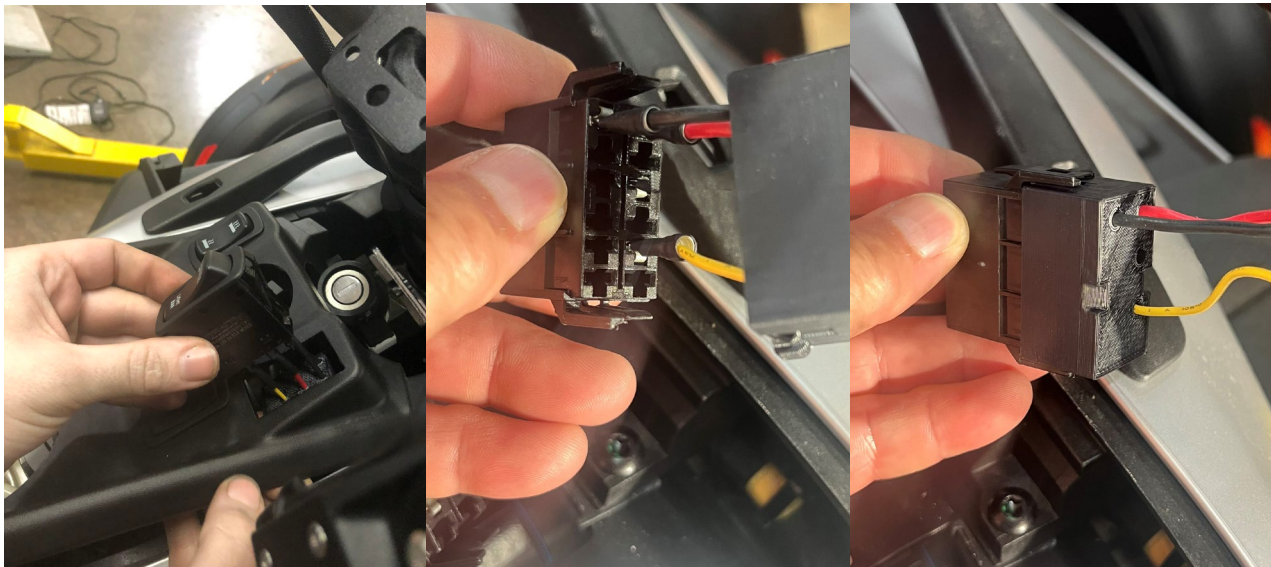

**4.- Reinstall the cover in reverse of how it was removed and place the plastic nut around the ignition key area. You can test it as shown as the Amber light will glow.**



**5.-Next install the front light bar. The light bar comes assembled but will need to be adjusted once installed. Locate in the upper right corner of the plastic front grille a plastic tab. Remove this and you will see the factory accessory light plug.**

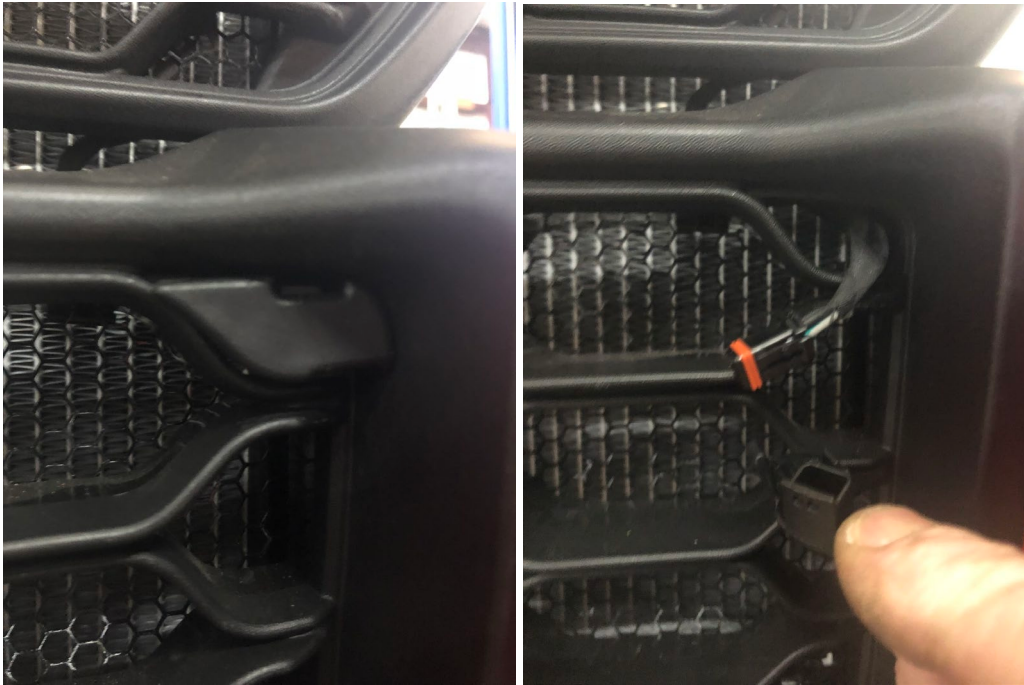

**5.-Take the supplied bolt & locknut and rubber spacer and place the light bar in the grille. Take the bolt as shown below with the rubber spacer on the inside of the grille. Then install the light bar as shown and do the same for the other side. Once both bolts are installed then evenly snug them down using a 7/16" and 3/8" wrench to secure the lightbar in place. Adjust the bar at night to show maximum coverage then tighten down. Do not overtighten, just tight enough to compress the rubber washer as shown below. Once the bar is in place plug the power plug into the OEM plug.**



**Make sure the top switch cover is reinstalled as it was removed and install the driver seat. Your new Canyon Light Bar is now installed.**

**We thank you for purchasing our Canyon Grille Guard Led Light Bar System. Today we know the need for Quality Accessories, and we have solved that demand with a stylish system that compliments the design of your NEW CANYON®!**