



Nelson & Nelson Mfg.
5210 Stadium Blvd, Suite C
Jonesboro AR 72401
870-268-6393 : Cell 870-219-1019

Installation Instructions 11-4-25

Model CAN-BRST
Canyon Drivers Backrest


Steps needed to install your Canyon Drivers Backrest Kit.



1.- To Install your new Canyon Drivers Backrest you will need a 9/16" boxed end wrench and a 7/32" Allen wrench. Remove the driver's seat. Lift-up the passenger seat as shown and slide the backrest mount through the OEM slot as shown.



2.- Next slide the backrest bar down to the mount shown, then take the supplied bolt and flange nut and place the bolt through the hole and place the nut on the back using the boxed wrench to help locate and hold the nut while assembling. Using the 7/32 Allen wrench, tighten down the bolt which secures the backrest mount.

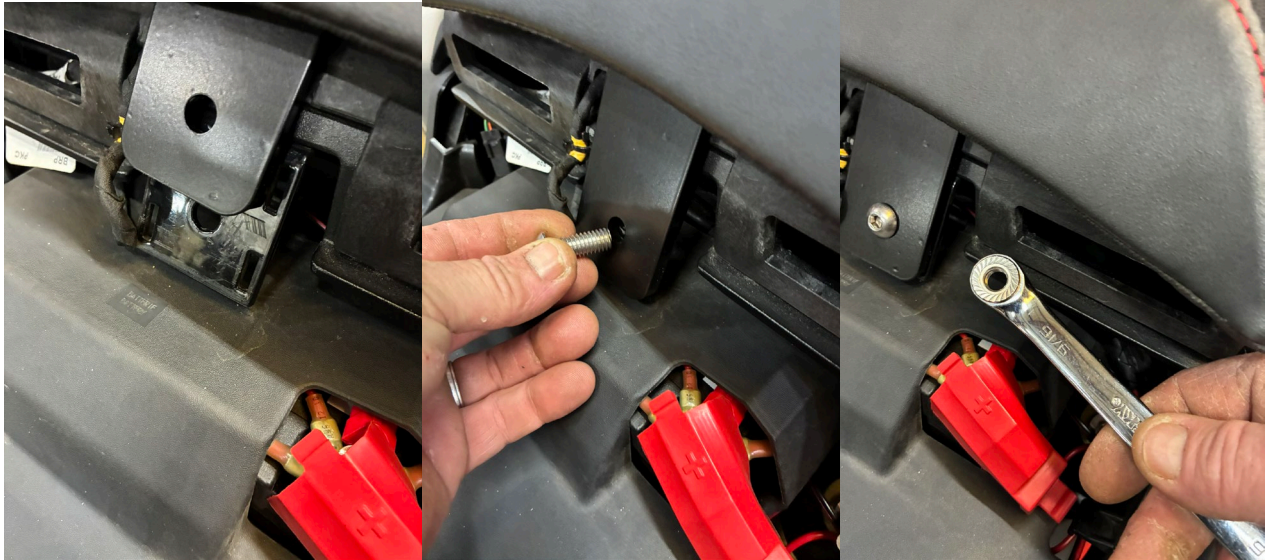

3.-Tighten down the bolt and then reinstall the driver's backrest. Next reinstall the driver's seat. Take a 3/6" Allen wrench and adjust the tilt angle bolt of the backrest as shown to fit your back for comfort. Turning the bolt clockwise tilts the backrest forward. Your Drivers backrest is now installed!





We thank you for purchasing our Canyon Driver Backrest kits. Today we know the need for Quality Accessories, and we have solved that demand with a stylish system that compliments the design of your NEW CANYON®!

spyderextras.com