



**Nelson & Nelson Mfg.
5210 Stadium Blvd, Suite C
Jonesboro AR 72404
870-268-6393 : Cell 219-1019**


Installation Instructions 12-18-25

Model CAN-FSKP


Steps needed to install your Canyon front lower skid plate. For 2025+ Canyon Models. Spyder Extras Grille Guard CAN-GRL must be installed first.




1.- To install the front lower skid plate you will need two 1/2 wrenches & a 5/32 Allen Wrench. Locate the lower frame hole shown below that will secure the back of the skid plate. To simply install the skid plate, raise the skid plate into position as shown below . You will see that the skid plate back has two tabs that rest on either side of the main frame. Align the holes

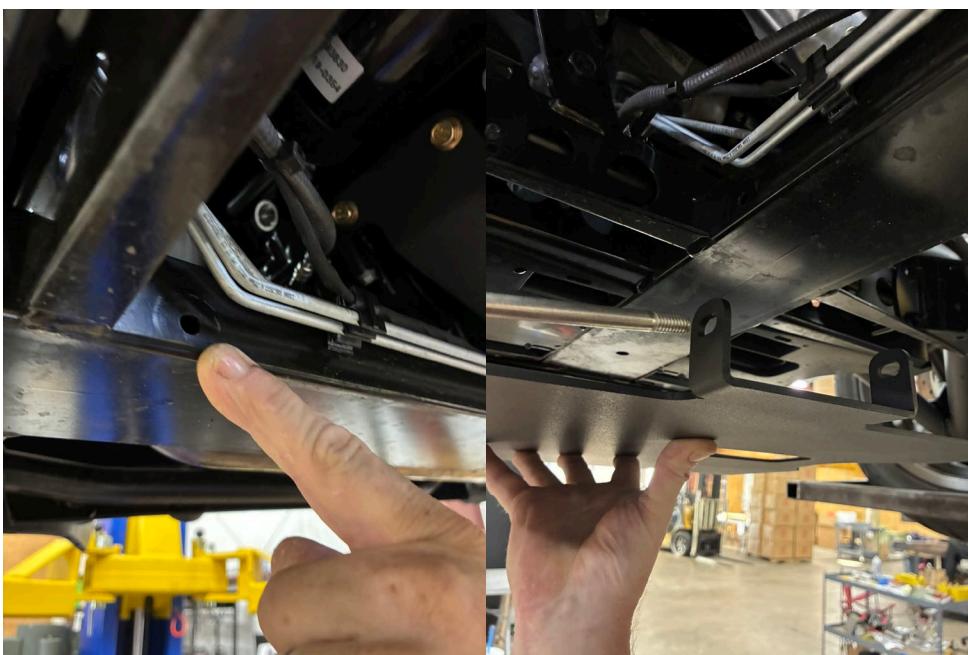

2.- Once the skid plate is in position take the supplied bolt with washer on head end of bolt and run the bolt through the skid plate as shown. Take the flange head nut on the opposite end and the two $\frac{1}{2}$ wrench and tighten the bolt slightly at this point. This will allow the skid plate to hang down while you secure it to the front of the grille guard.

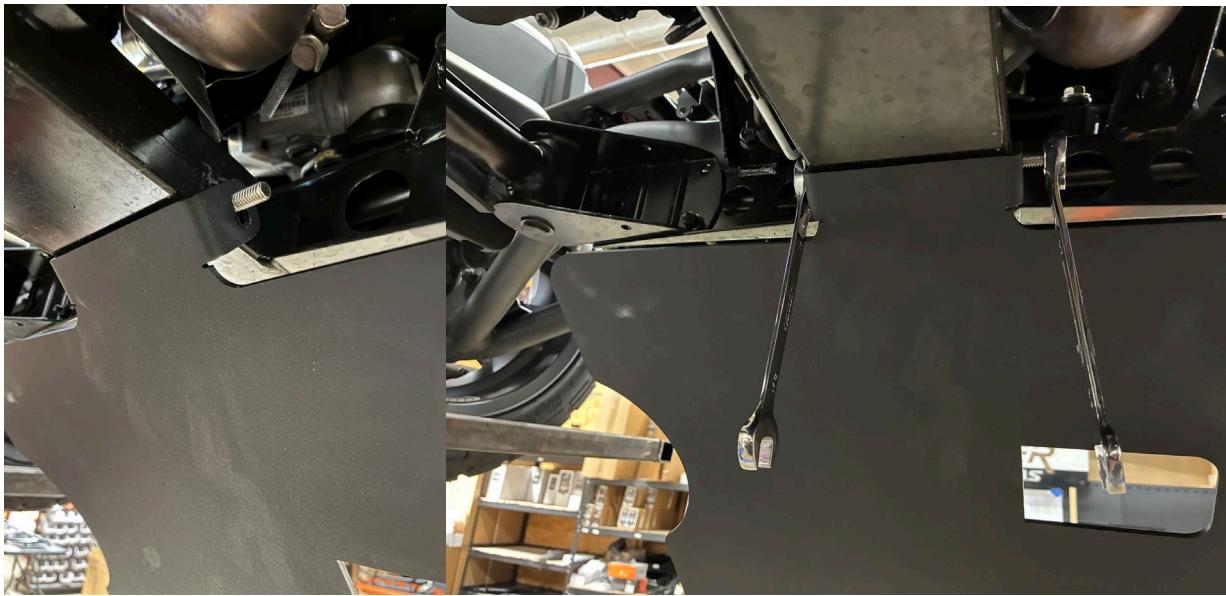

3.- Tilt the skid plate upwards and take the supplied black button head screws and washers, using the 5/32 Allen wrench and secure the front skid plate tabs to the underside of the grille guard as shown. Do this for both sides. Once these are installed and tightened, tighten up the rear main bolt and your skid plate is installed.

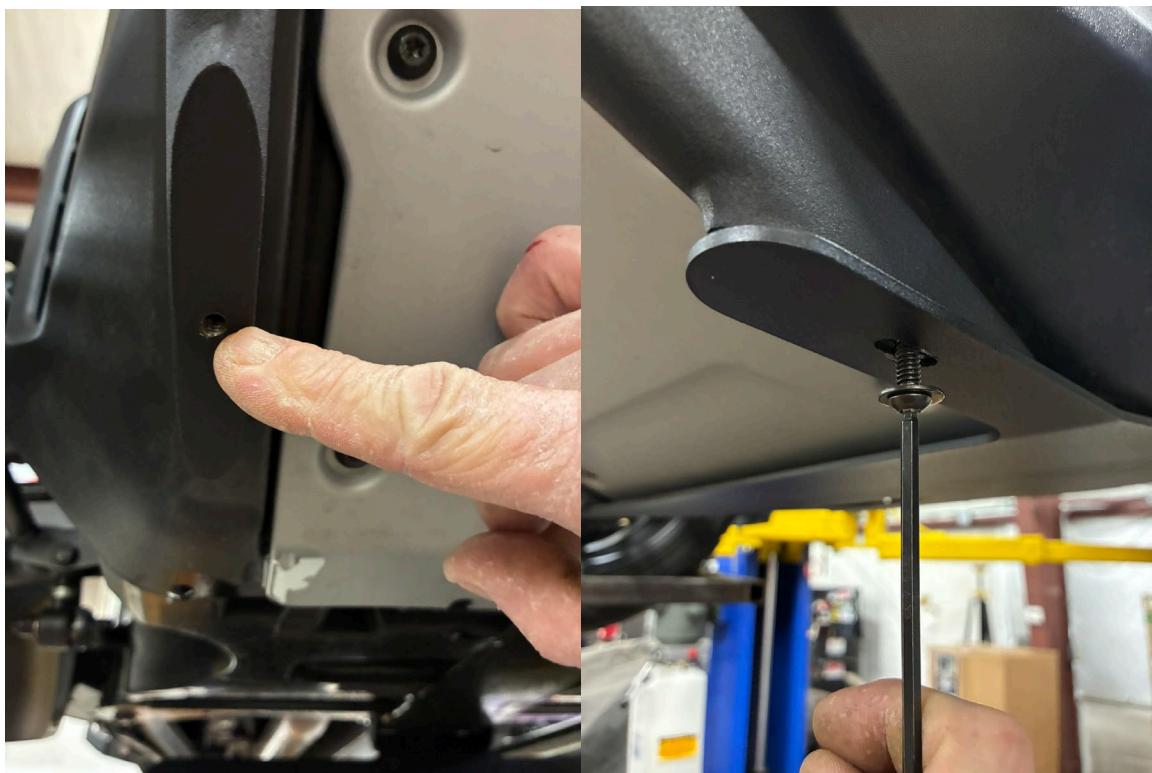

We thank you for purchasing our Canyon Front Skid Plate. Today we know the need for accessories for your Canyon, and we have solved that demand with a stylish system that complements the design of your Canyon®!