



Nelson & Nelson Mfg.
5210 Stadium Blvd, Suite C
Jonesboro AR 72404
870-268-6393 : Cell 219-1019


Installation Instructions 1-12-26

Model CAN-FLBD

Steps needed to install your Canyon FLOORBOARDS.



1.- To install the floorboards you will need to first disassemble the OEM main footrest. Use a T-30 Torx wrench to remove the foot peg off the mount. There is a screw on each side. Do this for both main footrest. Once the footpeg is removed take a T-40 Torx wrench and remove the mount from the frame. Again, do this on both sides. This installation below also shows the Spyder Extras Skid Plates installed.

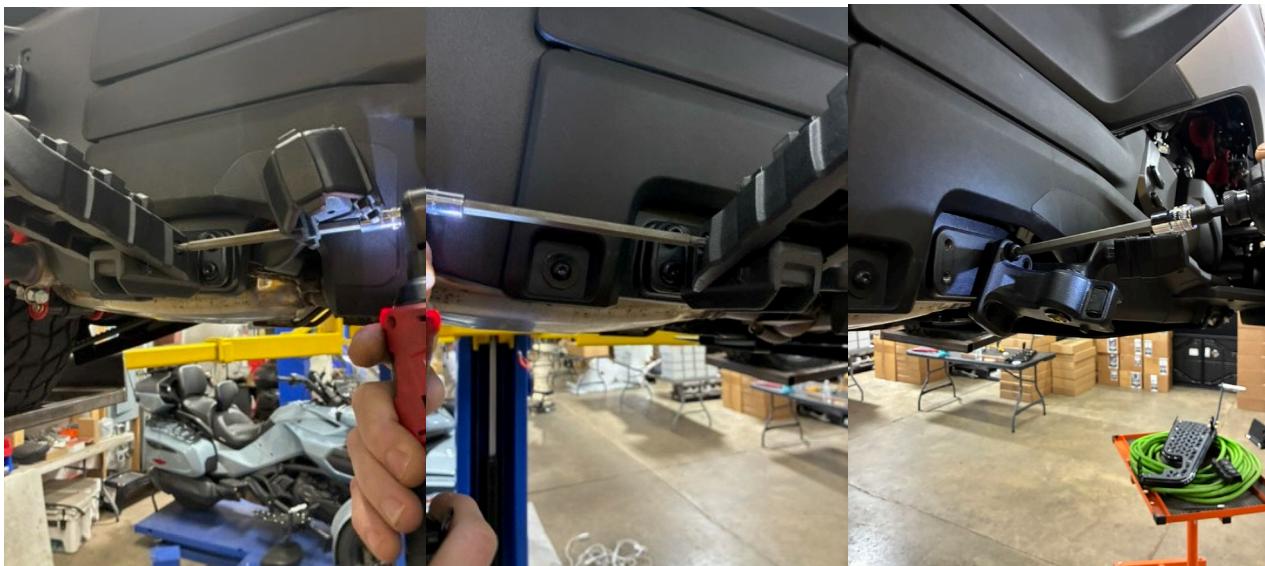

2.- Next use an 8MM Allen wrench and remove the two main bolts that secure the plastic diverter as shown below. Do this again on both sides.




3.- Then take the floorboard such as the right side shown below and located the rear of the board where the OEM footpeg was located. Take the mount and now reattached the mount using the same bolts. Secure but do not fully tighten. Then secure the front with the two bolts used to hold on the plastic diverter. Use the supplied washers between the floorboard mount and the slot of the diverter. This acts as a spacer. Snug those bolts down at this point. You will need to make sure



4.- Once all bolts are installed tighten up front and rear bolts evenly. Once the floorboard is secure then you can reassemble the footrest on the footrest mount.

5.- Next take the highway peg arms and install them. Use the Allen wrench and a 9/16" wrench to secure the socket head bolts. Use the supplied washer and locknuts. Snug each side down. Tilt the arms forward all the way. Sit on the Canyon and place your feet on the pegs and move them forward to a comfortable riding position. Once found, then tighten both bolts on each highway peg arm.

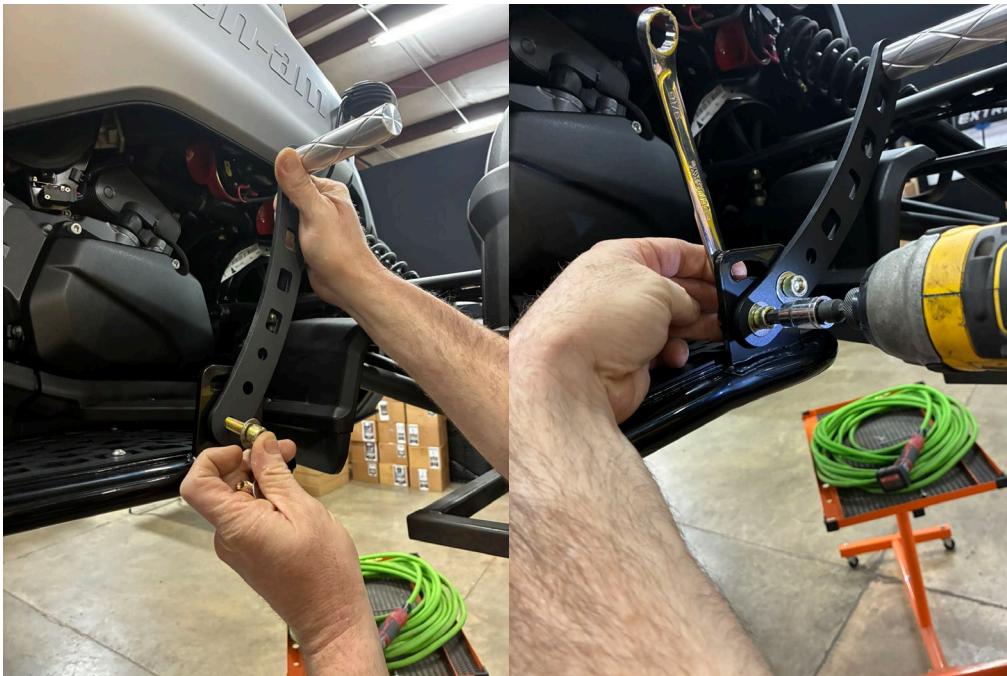

Your new Canyon Floorboards are now installed. This will provide riding comfort and safety!

We thank you for purchasing our Canyon Floorboards. Today we know the need for accessories for your Canyon, and we have solved that demand with a stylish system that compliments the design of your Canyon®!